

Model 100 Injection Pump



High Idle Screw: located above the low idle screw

Low Idle Screw: located below the high idle screw

FVP

ADJUST HIGH IDLE SCREW OUT FOR MORE RPM, LOW IDLE SCREW IN FOR MORE RPM