




## FSP106 High Pressure Electric Fuel Supply Pump (260 gph) Settings Chart

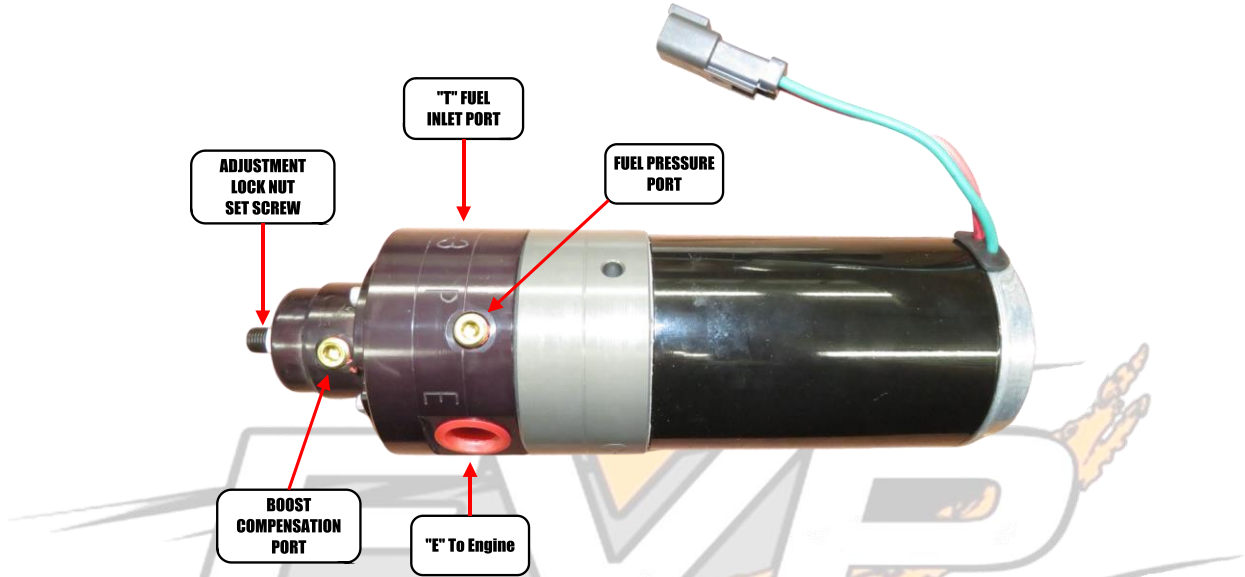

Pressure Regulator Screw Adjustment	
Boost Port Not Connected	
w/.028" Injection Pump Orifice Return Fitting	
½ turn in	10 psi
1 turn in	15 psi
1 ½ turns in	20 psi
2 turns in	24 psi
2 ½ turns in	28 psi
3 turns in	32 psi
3 ½ turns in	38 psi
4 turns in	44 psi
4 ½ turns in	48 psi
5 turns in	55 psi
5 ½ turns in	58 psi
6 turns in	65 psi

Pressure Regulator Screw Adjustment						
Turbo Boost Line Connected To Boost Port						
w/.028" Injection Pump Orifice Return Fitting						
Pump Pressure Setting (PSI) (0-Boost)	Boost Pressure (PSI) Applied					
	10	20	30	40	50	60
10	15	25	35	45	55	67
15	20	25	35	45	55	70
20	28	35	45	55	65	75
25	35	42	52	62	70	80